



**GENERAL ELECTRIC**

**X = Current Sensor Tap Setting or Rating**

**Current Sensor Taps (Amperes) LVPCB**

AKR-30 100/150/225/300  
or 300/400/600/800  
AKR-50 300,400/600/800  
or/600/800/1200/1600  
AKRT-50 800/1200/1600/2000  
AKR-75 1200/1600/2000/3200  
AKR-100 1600/2000/3000/4000

**Fixed Current Sensor Ratings (Amperes) LVPCB**

AKR-30 100,150,225,300,400,600,800  
AKR-50 300,400,600,800,1200,1600  
AKRT-50 800,1200,1600,2000  
AKR-75 1200,1600,2000,3200  
AKR-100 1600,2000,3000,4000

**Voltage Rating: 600 Volts, ac, 50/60 Hertz**

**Current Sensor Taps (Amperes) ICCB**

800 Envelope 400/200,600/300,800/400  
1600 Envelope 800/400,1000/500  
1200/600,1600/1000  
2000 Envelope 2000/1200  
2500 Envelope 600/300,800/400,1000/500,  
1200/600,1600/1000  
2000/1200/2500/1800

**Fixed Current Sensor Ratings (Amperes) ICCB and MCCB**

3000 Envelope 3000/2400  
4000 Envelope 4000/3000  
150,200,300,400,500,600,800,1000  
1200,1600,2000,2500,3000,4000

**LOW-VOLTAGE POWER  
CIRCUIT BREAKERS  
INSULATED CASE AND  
MOLDED CASE CIRCUIT BREAKER  
with Micro-VersaTrip®**

**Ground Fault  
Time-current Curves**

**GES-6195**

**Ground Fault Unit**

Pickup Settings: 0.2, 0.25, 0.3, 0.35, 0.4, 0.45, 0.5, 0.6 multiples of the current sensor tap setting or rating (X) for sensors of 150 to 2000 amperes.

Pickup Settings: 0.2, 0.22, 0.24, 0.26, 0.28, 0.30, 0.34, 0.37 multiples of the current sensor tap setting or rating (X) for sensors of up to 3200 amperes.

Pickup Settings: 0.2, 0.22, 0.24, 0.26, 0.28, 0.30 multiples of the current sensor tap setting or rating (X) for sensors of up to 4000 amperes.

Delay Bands: 3 settings of MIN, INT, MAX for all ratings.

(Curves apply at 50/60 Hertz and from -20C to +55C breaker ambient)